




Tamlyn Color Flashing

Window Flashing

PRODUCT DETAIL

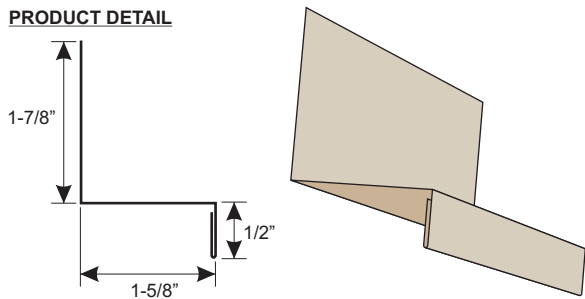

Custom sizes available to fit your specifications !

DESIGN FEATURES

Window flashing provides an easy to install and long-lasting method of stopping water penetration. Used over window trim, band boards, panel intersections, and other vertical surfaces.

INSTALLATION

1. After installing the window, cut and install a 1/4" thick shim above the window. The shim should be the same width as the trim, and it should be as long as the top or header piece of trim.
2. Over the shim install window flashing that is wide enough to allow for the thickness of the trim.
3. Install the panel or lap siding to the window and around the shim taking care not to damage the window flashing and leaving a 1/4" gap between the panel or lap siding and the horizontal part of the flashing.
4. Install the trim around the window, slipping the head piece under the installed window flashing.

MATERIAL

3105-type aluminum sheet coated on both sides with Dymalar® 2000 paint system that is specifically formulated for residential exterior applications.

Standard colors shown below. Other colors available upon request.



**ColorPlus
Technology™**



ColorPlus Technology logo, Recommended logo, HardiePanel and HardiePlank are trademarks or registered trademarks of James Hardie International Finance B.V.

INSTALLATION DETAIL

