

TamlynWrap® ProSelect™ Commercial Wrap Method 2: “Cut-Back” Method

Tech Support / Sales: 800-334-1676
www.tamlyn.com



- Extend **TamlynWrap® ProSelect™ Commercial Wrap** a minimum of **2"** over the foundation ledge.
- **TamlynWrap® ProSelect™ Commercial Wrap** should always be lapped in shingle fashion starting from the lowest point. Proper shingling is required to shed water through gravity and to prevent water from entering the wall system.
- Unroll **TamlynWrap® ProSelect™ Commercial Wrap** and fasten to sheathing with **cap-fasteners**
- Fasteners should provide a minimum **1/2"** penetration into the nail base and be spaced approximately **12"** to **18"** apart along the horizontal and vertical laps. Fasten **36"** apart everywhere else.
- Overlap Horizontal and Vertical seams by at least **6"** and corners by **12"**. Stagger vertical seams wherever possible.
- Seam Tape Requirements
 - Tape all seams using **XtremeSeam™ Tape** in order to meet the **25 year** warranty and air barrier requirements.
 - Install seam tape using TAMLYN guidelines.
- Be sure that the wrap installation and flashing allows drainage to the exterior of the assembly.
- Do not allow the wrap to be exposed to sunlight in excess of **270 days**.

***Note:** Use a sharp blade or scissors to cut **TamlynWrap® ProSelect™ Commercial Wrap**

Warranty Statement

15 Year Warranty

Tamlyn warrants that **TamlynWrap® Drainable WRB** and **TamlynWrap® ProSelect™**, when installed in accordance with Tamlyn's published installation instructions, is free from manufacturing defects for **15 years** from the date of purchase.

25 Year Warranty

Full Line Tamlyn Water Management Accessories (i.e. XtremeSeam™ Tape, XtremeFlashing™ and XtremeSealant™) must be used as a complete system. All seams must be taped. **Registration required.**

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 2: “Cut-Back” Method

Tech Support / Sales: 800-334-1676
www.tamlyn.com

1. Rough Opening



FIG 1:



FIG 2:

- Cut TamlynWrap[®] ProSelect[™] Commercial Wrap 2” out from rough opening along sill and jambs as shown in (FIG 1).
- Make angle cuts at window head and tuck it out of the way as shown in (FIG 2).

2. Sill Flashing



FIG 3:



FIG 4:



FIG 5:

- Install XtremeFlashing[™] min 3” below sill and across front of WRB. Cut a slit in XtremeFlashing[™] along jamb and adhere remainder along sill. (FIG 3)
- Flash both corners with Bow-Tie or corner piece. (FIG 4)
- Adhere additional piece of flashing to fully cover sill and extend up jambs a min of 6”. Flashing should extend to the inside edge of sill. Slit remaining XtremeFlashing[™] at the corner and adhere to the exterior of the wall (FIG 5)

NOTE: Use min 6” wide flashing for 2x4 framing. Use min 9” wide flashing for 2x6 framing.

***Always use roller or hand applicator when installing tapes.**

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 2: “Cut-Back” Method

Tech Support / Sales: 800-334-1676
www.tamlyn.com

3. Sealant



FIG 6:

- Apply **XtremeSealant[™]** to the jambs and head of the window **before** installing. **Never** apply the sealant at the bottom of the sill (FIG 6).

4. Set Window



FIG 7:

- Set the window into the rough opening, level, and fasten to the substrate per window manufacturer's recommendation. Sill Flashing should be visible below the sill flange. Do not apply **XtremeFlashing[™] Tape** over the bottom flange. This area is left open to allow water to drain in the event of a window leak. (FIG 7).

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 2: “Cut-Back” Method

Tech Support / Sales: 800-334-1676
www.tamlyn.com

5. Jamb Flashing



FIG 8:

- Adhere vertical sections with **XtremeFlashing[™] Tape** over the jamb flanges. Extend vertical flashing approximately 3” above the window head and below sill flashing as shown in **(FIG 8)**

6. Head Flashing

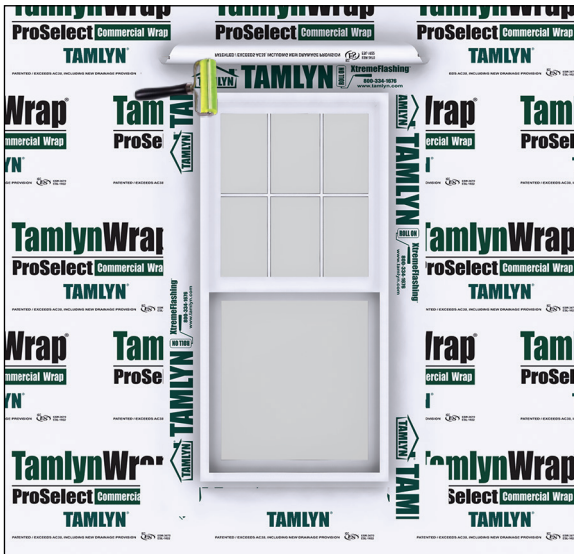


FIG 9:

- Adhere **XtremeFlashing[™] Tape** to the head flange and to the sheathing. Head flashing must extend beyond jamb flashing on either side. Jamb flashing should not extend above the head flashing. **(FIG 9)**.

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 2: “Cut-Back” Method

Tech Support / Sales: 800-334-1676
www.tamlyn.com

7. FINAL STEPS



FIG 10:



FIG 11:

- Fold the top tab of **TamlynWrap[®] ProSelect[™] Commercial Wrap** over the head section as shown in **(FIG 10)**.
- Tape corners using **XtremeFlashing[™]** as shown in **(FIG 11)**.

Note: For best results, apply a continuous bead of sealant to the interior side of the window. Consult Tamlyn for additional methods and detailing.