

TamlynWrap® ProSelect™ Commercial Wrap

Method 1: Modified "I"

Tech Support / Sales: 800-334-1676
www.tamlyn.com



- Extend **TamlynWrap® ProSelect™ Commercial Wrap** a minimum of **2"** over the foundation ledge.
- **TamlynWrap® ProSelect™ Commercial Wrap** should always be lapped in shingle fashion starting from the lowest point. Proper shingling is required to shed water through gravity and to prevent water from entering the wall system.
- Unroll **TamlynWrap® ProSelect™ Commercial Wrap** and fasten to sheathing with **cap-fasteners**.
- Fasteners should provide a minimum **1/2"** penetration into the nail base and be spaced approximately **12"** to **18"** apart along the horizontal and vertical laps. Fasten **36"** apart everywhere else.
- Overlap Horizontal and Vertical seams by at least **6"** and corners by **12"**. Stagger vertical seams wherever possible.
- Seam Tape Requirements
 - Tape all seams using **XtremeSeam™ Tape** in order to meet the **25 year** warranty and air barrier requirements.
 - Install seam tape using TAMLYN guidelines.
- Be sure that the wrap installation and flashing allows drainage to the exterior of the assembly.
- Do not allow the wrap to be exposed to sunlight in excess of **270 days**.

***Note:** Use a sharp blade or scissors to cut **TamlynWrap® ProSelect™ Commercial Wrap**

Warranty Statement

15 Year Warranty

Tamlyn warrants that **TamlynWrap® Drainable WRB** and **TamlynWrap® ProSelect™**, when installed in accordance with Tamlyn's published installation instructions, is free from manufacturing defects for **15 years** from the date of purchase.

25 Year Warranty

Full Line Tamlyn Water Management Accessories (i.e. XtremeSeam™ Tape, XtremeFlashing™ and XtremeSealant™) must be used as a complete system. All seams must be taped. **Registration required.**

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 1: Modified "I"

Tech Support / Sales: 800-334-1676
www.tamlyn.com

1. Rough Opening



FIG 1:



FIG 2:

- Cut TamlynWrap[®] ProSelect[™] Commercial Wrap as shown in (FIG 1).
- Fasten the tabs at the sill and the jamb inward. Fold up the tabs at the window head, and tuck it out of the way as shown in (FIG 2).

2. Sill Flashing



FIG 3:



FIG 4:



FIG 5:

- Install XtremeFlashing[™] min 3" below sill and across front of WRB. Cut a slit in XtremeFlashing[™] along jamb and adhere remainder along sill. (FIG 3).
- Flash both corners with Bow-Tie or corner piece. (FIG 4).
- Adhere additional piece of flashing to fully cover sill and extend up jamb a min of 6". Flashing should extend to the inside edge of sill. Slit remaining XtremeFlashing[™] at the corner and adhere to the exterior of the wall (FIG 5)

NOTE: Use min 6" wide flashing for 2x4 framing. Use 9" wide flashing for 2x6 framing

***Always use roller or hand applicator when installing tapes.**

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 1: Modified "I"

Tech Support / Sales: 800-334-1676
www.tamlyn.com

3. Sealant



FIG 6:

- Apply XtremeSealant[™] to the jambs and head of the window before installing. **Never apply the sealant at the bottom of the sill (FIG 6).**

4. Set Window



FIG 7:

- Set the window into the rough opening, level, and fasten to the substrate per window manufacturer's recommendation. Sill Flashing should be visible below the sill flange. Do not apply XtremeFlashing[™] Tape over the bottom flange. This area is left open to allow water to drain in the event of a window leak. **(FIG 7).**

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 1: Modified "I"

Tech Support / Sales: 800-334-1676
www.tamlyn.com

5. Jamb Flashing

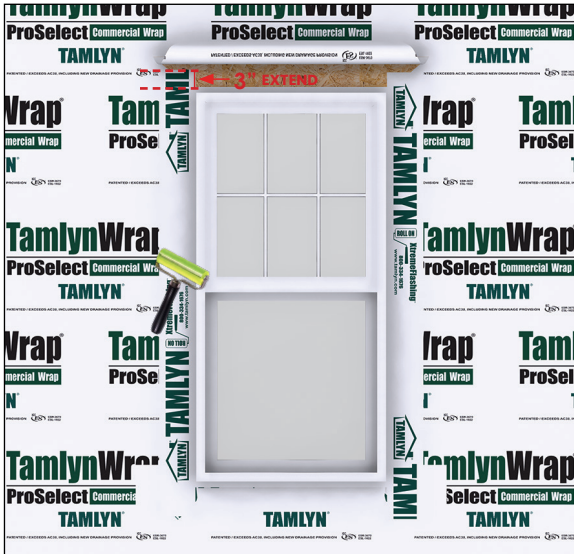


FIG 8:

- Adhere vertical sections with **XtremeFlashing[™] Tape** over the jamb flanges. Extend vertical flashing approximately 3" above the window head and below sill flashing as shown in **(FIG 8)**

6. Head Flashing



FIG 9:

- Adhere **XtremeFlashing[™] Tape** to the head flange and to the sheathing. Head flashing must extend beyond jamb flashing on either side. Jamb flashing should not extend above the head flashing. **(FIG 9)**.

TamlynWrap[®] ProSelect[™] Commercial Wrap
Method 1: Modified "I"

Tech Support / Sales: 800-334-1676
www.tamlyn.com

7. FINAL STEPS

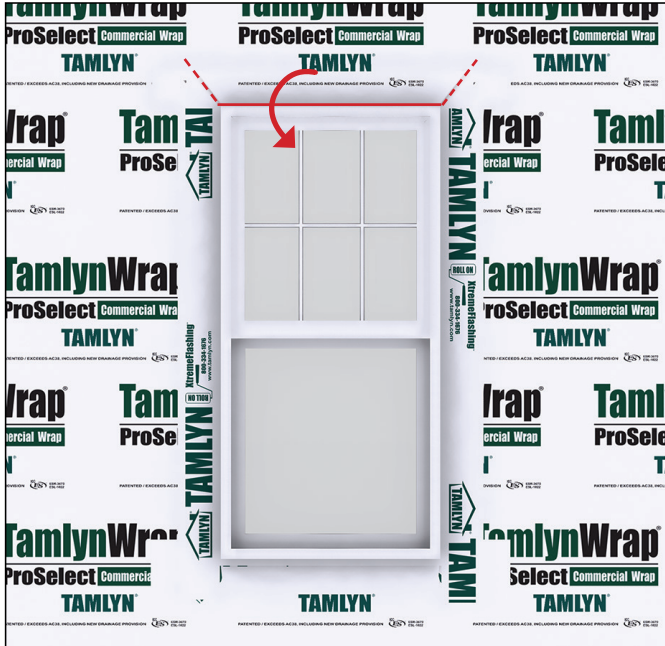


FIG 10:



FIG 11:

- Fold the top tab of **TamlynWrap[®] ProSelect[™] Commercial Wrap** over the head section as shown in **(FIG 10)**.
- Tape corners using **XtremeFlashing[™] Tape** as shown in **(FIG 11)**.

Note: For best results, apply a continuous bead of sealant to the interior side of the window. Consult Tamlyn for additional methods and detailing.