

## 1. Rough Opening (Modified "I" Shown)



FIG 1:



FIG 2:

- Cut TamlynWrap<sup>®</sup> WRB as shown in (FIG 1).
- Fasten the tabs at the sill and the jambs inward. Fold up the tabs at the window head, and tuck it out of the way as shown in (FIG 2).

## 2. Sill Flashing - CORNERS INSTALLATION

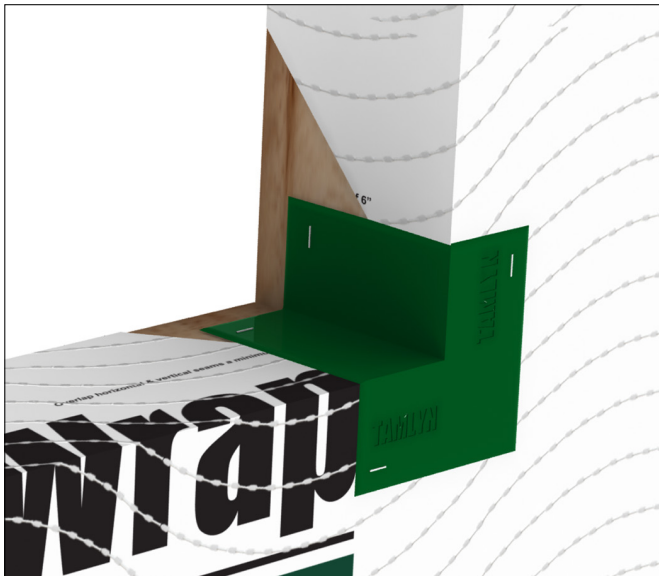


FIG 3:



FIG 4:

- Attach Tamlyn<sup>®</sup> XtremeCorners<sup>™</sup> to sill corners using staples or nails as shown in (FIG 3).
- Repeat for other side as shown in (FIG 4).

## 2. Sill Flashing – CORNERS INSTALLATION (cont)

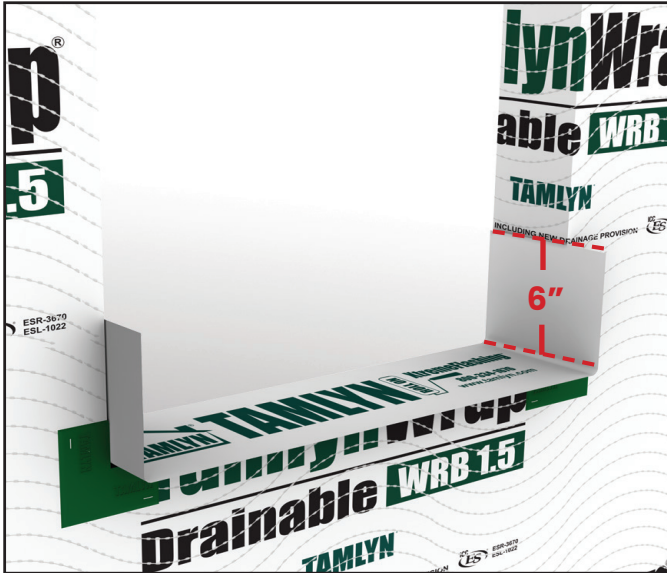


FIG 5:

- Install a piece of **XtremeFlashing™ Tape** to fully cover the sill and extend up jambs a min of **6"**. Flashing should extend to the inside edge of the rough opening as shown in **(FIG 5)**.

**NOTE:** Use min 6" wide flashing for 2x4 framing. Use min 9" wide flashing for 2x6 framing.

- Cut a straight slit at each corner of **XtremeFlashing™ Tape** and adhere to the exterior of the wall as shown in **(FIG 6)**.

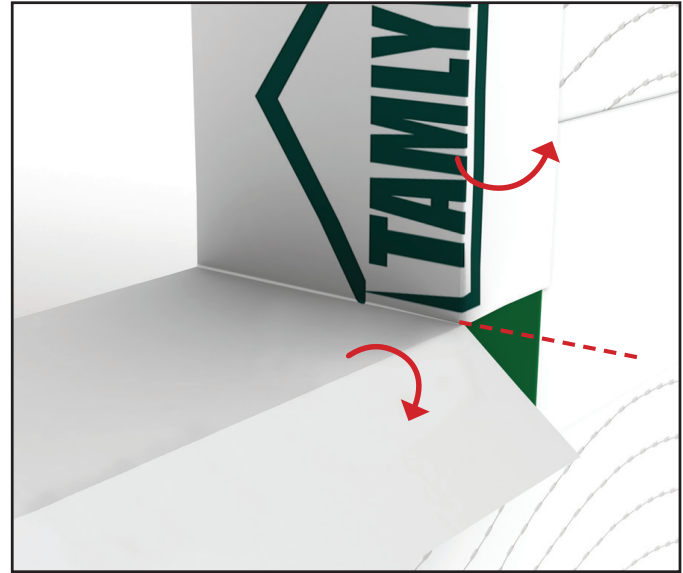


FIG 6:



FIG 7:

- Adhere remainder of flashing to the exterior along the jambs and sill areas as shown in. **(FIG 7)**.

**\*Always use roller or hand applicator when installing tapes.**

### 3. Sealant



FIG 6:

- Apply **XtremeSealant™** to the jambs and head of the window before installing. **Never apply the sealant at the bottom of the sill (FIG 6).**

### 4. Set Window



FIG 7:

- Set the window into the rough opening, level, and fasten to the substrate per window manufacturer's recommendation. Sill Flashing should be visible below the sill flange. Do not apply **XtremeFlashing™ Tape** over the bottom flange. This area is left open to allow water to drain in the event of a window leak. **(FIG 7).**

## 5. Jamb Flashing

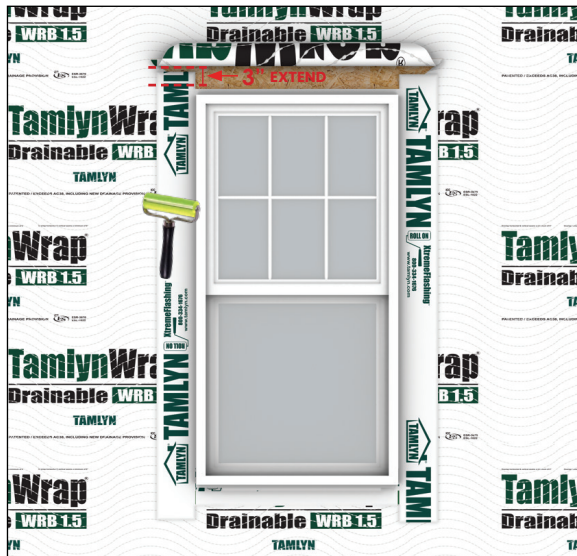


FIG 8:

- Adhere vertical sections with **XtremeFlashing**<sup>™</sup> **Tape** over the jamb flanges. Extend vertical flashing approximately 3" above the window head and below sill flashing as shown in **(FIG 8)**

## 6. Head Flashing

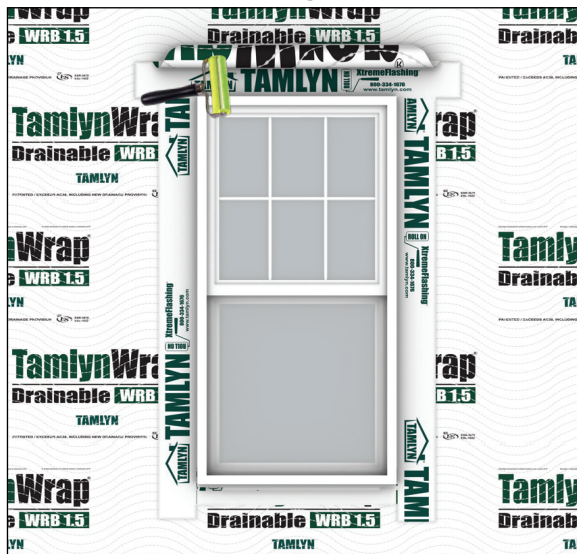


FIG 9:

- Adhere **XtremeFlashing**<sup>™</sup> **Tape** to the head flange and to the sheathing. Head flashing must extend beyond jamb flashing on either side. Jamb flashing should not extend above the head flashing. **(FIG 9)**.

## 7. FINAL STEPS

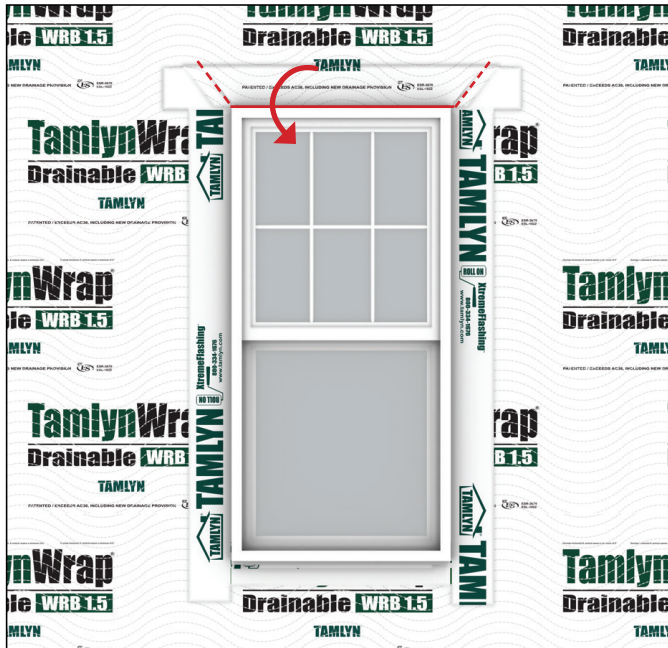


FIG 10:

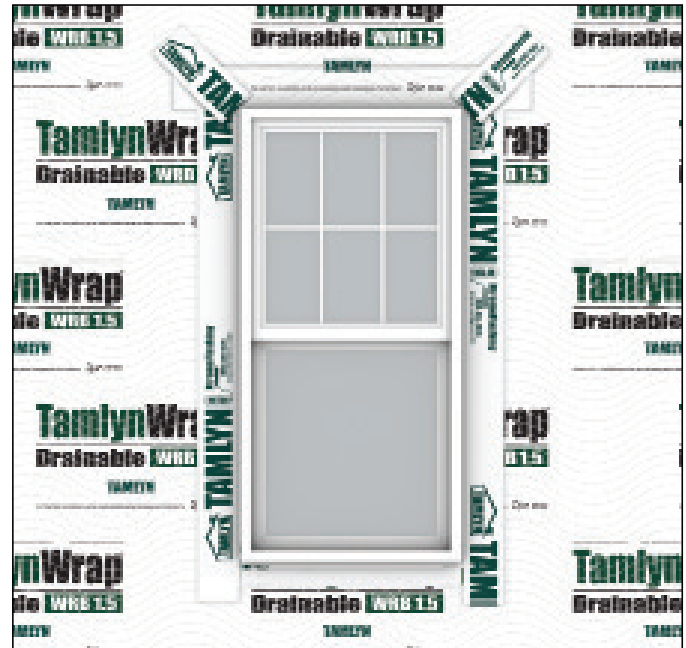


FIG 11:

- Fold the top tab of **TamlynWrap**<sup>®</sup> **Drainable WRB** over the head section as shown in **(FIG 10)**.
- Tape corners using **XtremeFlashing**<sup>™</sup> as shown in **(FIG 11)**.

**Note:** For best results, apply a continuous bead of sealant to the interior side of the window. Consult Tamlyn for additional methods and detailing.