
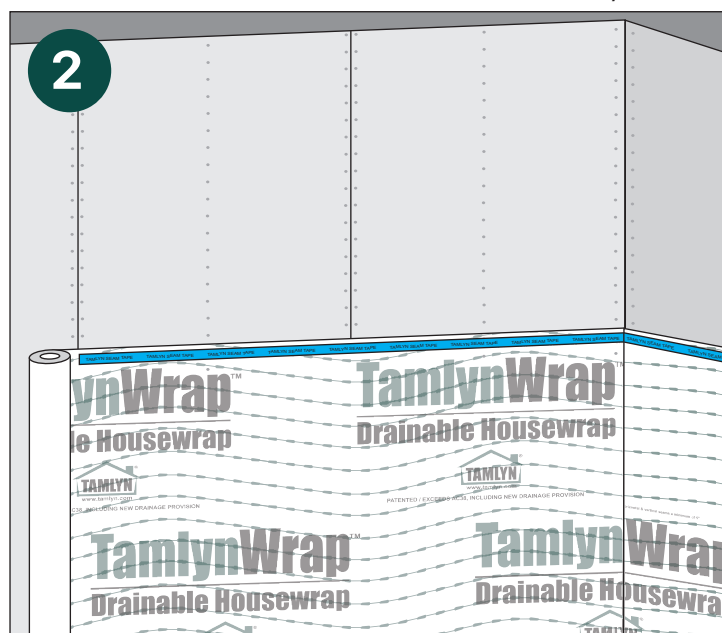



TamlynWrap® Drainable Housewrap
XtremeSeam Tape™

 Tech Support / Sales: 800-334-1676
 www.tamlyn.com


- Unroll TamlynWrap™ Drainable Housewrap with spacers facing to the exterior and fasten to sheathing with cap-fastener
- Fasteners should provide a minimum 1/2" penetration into the nail base and be spaced approximately 12 to 18 inches apart along the horizontal and vertical laps.
- TamlynWrap™ Drainable Housewrap should be installed shingle lap fashion (i.e. begin installation at the base of the wall assembly).
- Extend housewrap a minimum 2 inches over sill plate.
- Overlap all horizontal seams by at least 6 inches, all vertical seams by at least 6 inches and corners by 12 inches.
- Be sure that the housewrap installation and flashing provide for positive drainage to the exterior of the assembly.
- Do not allow the housewrap to be exposed to sunlight in excess of 120 days. recommended coverage within 30 days.
- When using TamlynWrap™ as primary air barrier and for 15 year warranty tape all seams using XtremeSeam Tape™, ensuring the area is dry and clean and it is recommended that for best adhesion a foam roller or hand applicator is used.

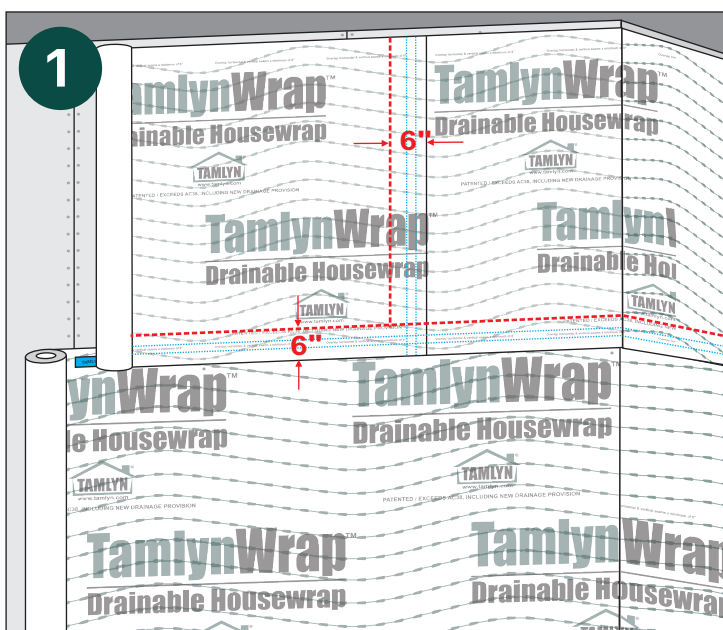

- Unroll first course of TamlynWrap™ with spacers facing the exterior and fasten to sheathing with cap-fasteners. XtremeSeam Tape™ is applied to the first course by removing one side of the release paper and for best results lay down with a foam roller or hand applicator.

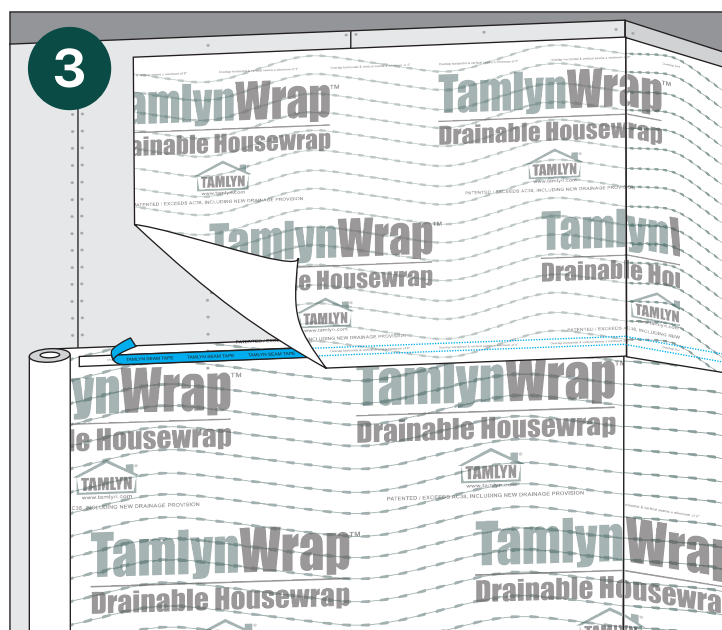

- With this in-place unroll the next course of TamlynWrap™ maintaining the required 6" of overlap, with fastening stopping 9" from the bottom of this course allowing for it to be folded up.
- Fold up and remove the release paper on the XtremeSeam Tape™ pressing the layers together, for best results use a foam roller or hand applicator. Then complete fastening along the seam.